

# **OPERATION MANUAL**

**IN-CAR MULTI-MEDIA PLAYER WITH  
MOTORIZED FLIP-UP PANEL, RADIO RECEIVER,  
BT, PHONE LINK, MULTI-SYSTEM**

## SIMPLE TROUBLE SHOOTING

### PROBLEMS, CAUSES & SOLUTIONS

#### No power

- Check and make sure the connecting wires are connected correctly
- Check whether the fuse is blown. Replace with the proper value fuse if necessary.

#### No sound

- Check and make sure the speaker wires are connected correctly.

#### No picture

- Check whether the video wire is connected to the video device.

#### Unit hang-up

- Press the RESET button to reset the unit to its default stage.

#### No function when pressing the buttons or TFT screen

- Press the RESET button to reset the unit to its default stage.

#### Poor effect or unable to receive radio

- Check whether the radio antenna is inserted or properly connected.
- Antenna may not be the proper length. Make sure the antenna is fully extended.
- Antenna may be poorly grounded. Check and make sure the antenna is properly grounded.

#### Stereo cannot be received under radio mode

- Tune the radio frequency accurately.
- The broadcasting signal is too weak, set the mode to MONO.

#### Remote handset does not work

- Replace new battery of the remote handset.
- Point the remote handset directly at the remote sensor of the main unit.
- Clean the surface of the remote sensor.

#### BT not operated

- check the devices are linked up correctly.

*Seicane*

#### GPS not operated

- check micro SD card with navigation software (map) has been inserted into SD card port for GPS.
- check GPS antenna connected properly.

#### Note

After the above efforts, if the unit still cannot be worked normally, consult your service dealer. Never attempt to disassemble the unit by yourself. No service part inside the unit.

## IMPORTANT NOTICE & PRECAUTIONS

Thank you for using our company multi-media player! To operate the unit correctly, please read the operation manual carefully before using. Keep this operation manual for further reference.

The unit is designed only for DC 12V negative ground operation system. Make sure your vehicle is connected to DC 12V negative ground electrical system. Be sure to connect the speaker (-) leads to the speaker (-) terminal. Never connect the left and right channel speaker wires together or to the vehicle body.

The normal temperature for operation is between -20 and +60 degree Celsius. Do not work in extreme high or low temperature and block vents or radiator panels of the unit, blocking them will cause heat to build up inside the unit and may cause damage or fire.

This unit can play the multi-media files: RMVB / MPEG 4 / DivX / AVI / 1080p / MP3 / WMA / JPEG.


## INSTALLATION

Accessories included in the package for installation



### Mounting Method


Put the mounting sleeve into the dashboard.

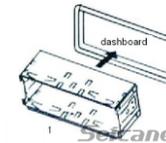

Band the tabs of the mounting sleeve (1) outward into the dashboard for a secure mounting.




If necessary, use the strap (6) to secure the back of the unit in place. The strap (6) can be bent by hand to the desired angle.

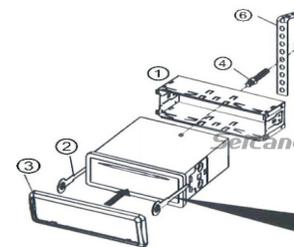

To remove the unit, insert the release keys (2) on both sides of the unit and then pull the unit out from the dashboard.




### To Detach the Front Panel

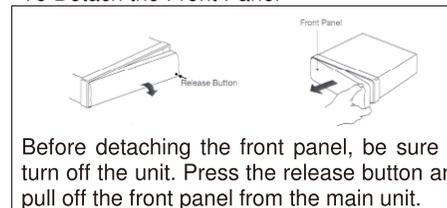

Before detaching the front panel, be sure to turn off the unit. Press the release button and pull off the front panel from the main unit.


### To Replace the Front Panel

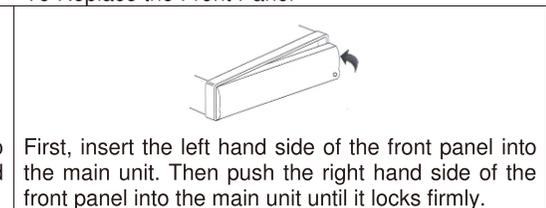

First, insert the left hand side of the front panel into the main unit. Then push the right hand side of the front panel into the main unit until it locks firmly.

## WIRING CONNECTION

### BACK OF MAIN UNIT

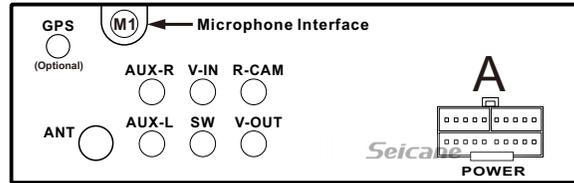

#### Remarks:

Due to the law of some countries, video playback is not allowed during driving. To allow video playback during driving, the brown wire (brake) should be connected to ground (B-) of the car battery.

Portion	Colour	Connection	
Connecting Socket	POWER	Red	Ignition switch (B+)
		Black (Coarse)	Ground (B-)
		Black (Fine)	Steering wheel control (Ground)
		Yellow	Memory back up (B+)
		White	Front left speaker (+)
		White / Black	Front left speaker (-)
		Grey	Front right speaker (+)
		Grey / Black	Front right speaker (-)
		Green	Rear left speaker (+)
		Green / Black	Rear left speaker (-)
		Purple	Rear right speaker (+)
		Purple / Black	Rear right speaker (-)
		Blue	Auto antenna (B+)
		Pink	Back sight (B+)
		Grey	Steering wheel control (1)
		Green	Steering wheel control (2)
		Orange	Illuminate backlight (B+)
	Brown	Brake (B-)	
	Red RCA Jack	Auxiliary right speaker output	
	White RCA Jack	Auxiliary left speaker output	
	ANT	Radio antenna	
	GPS	GPS antenna (Optional)	
Audio input jack	AUX-R	Red	Auxiliary right speaker input
	AUX-L	White	Auxiliary left speaker input
Audio output jack	SW	Green	Sub-woofer output
Video input jack	V-OUT	Yellow	Video output
	R-CAM	Yellow	Back sight camera input
	V-IN	Yellow	Video input
Loose Connecting Cable	M1		
			External microphone interface.

## MAIN UNIT OPERATION

### Symbol / Function

### Operations & Controls

RESET

Press with a pointed object (such as a ball point) to reset the unit to its initial setting by the factory (default stage).



When the unit is turned off, press to turn on the unit.  
When the unit is turned on, press & hold shortly to turn off the unit.

## SPECIFICATION

### GENERAL

Power Requirement:  
Load Impedance:  
Maximum Power Output:  
Tone Control – Bass (at 100 Hz)  
Treble (at 10 KHz)

DC 12 Volts, negative ground  
4 Ohms  
40 watts x 4 (RMS)  
+/- 8 dB  
+/- 8 dB

### AM RADIO SECTION

Frequency Range  
Usable Sensitivity (-20 dB)

522 – 1620 kHz  
25 dB

### FM RADIO SECTION

Frequency Range  
Usable Sensitivity (-20 dB)  
Signal to Noise Ratio  
Stereo Separation (at 1 KHz)  
Frequency Response

87.5 – 108 MHz  
15 dB  
60 dB  
30 dB  
30 Hz – 15 KHz

### AUDIO SECTION

Maximum Output Level:  
Frequency Response:  
Signal to Noise Ratio:  
Channel Separation:

2 Vrms (+/-3 dB)  
20 Hz to 20 KHz  
85 dB  
80 dB

### VIDEO SECTION

Video System:  
TV System:  
Video Output Level:  
Horizontal Resolution:


NTSC  
PAL / SECAM / NTSC  
1.0Vp-p 75 Ohms  
500

### BT SECTION

Communication type:  
Maximum Distance:

V2.1  
5 meters

Note: Specification and design; functions and features; unit illumination; colour and display segment are subject to change without prior notice. Photos and drawings on gift box or operation manual might be varied from the exact unit. Depends on the input devices, operation might be varied from the operation manual described.

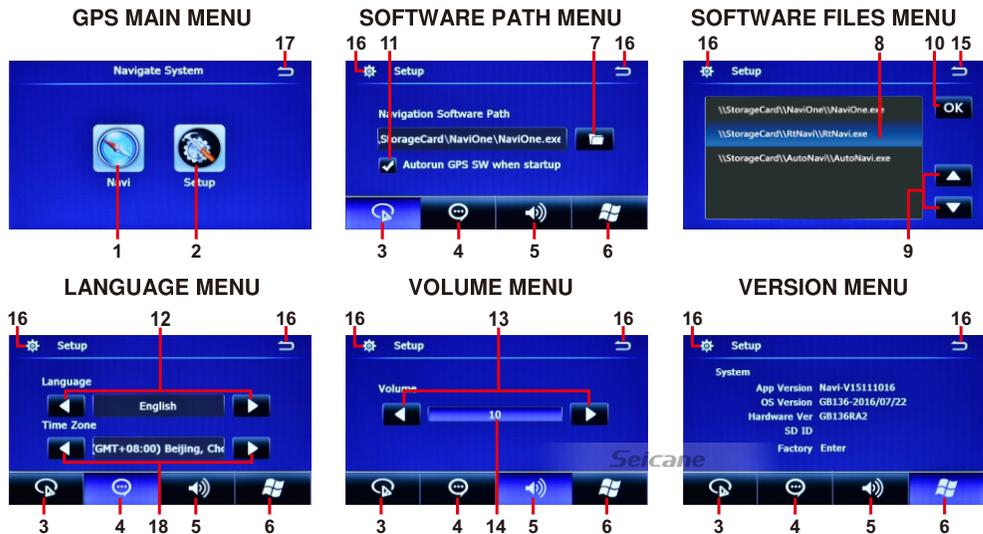

1. Touch to start navigation (when navigation software path has been set) or to shift to **SOFTWARE PATH MENU** to select navigation software path.
2. Touch to shift to **SOFTWARE PATH MENU** to select navigation software path.
3. Touch to shift to **SOFTWARE PATH MENU** to select navigation software path.
4. Touch to shift to **LANGUAGE MENU** to select on screen language at GPS mode.
5. Touch to shift to **VOLUME MENU** to set volume output at GPS mode.
6. Touch to shift to **VERSION MENU** to view the GPS system version. (Note: This menu is not available for setting)
7. Touch to shift to **SOFTWARE FILES MENU** to select navigation software path.
8. Touch to select the desired navigation software path.
9. Touch to shift page up or down.
10. Touch to confirm the selected navigation software path.
11. Touch to turn on or off of auto run the selected GPS software path when GPS startup.
12. Touch repeatedly to select on screen language at GPS mode.
13. Touch repeatedly to set for the volume output at GPS mode.
14. Hold & slide to set for the volume output at GPS mode.
15. Touch to shift to **SOFTWARE PATH MENU**.
16. Touch to shift to **GPS MAIN MENU**.
17. Touch to shift to **MAIN MENU** to select other operation mode. In case no selection made, the unit will shift to MENU of the current operation mode.
18. Touch repeatedly to select time zone.

### **IMPORTATION NOTICE FOR ON SCREEN OPERATION**


Interfaces, photos, images, icons & location as shown in this part of operation manual may be varied from the exact unit. However, all of them come with similar outlook of the same type and with the same operation method.

- Press to turn on or off of sound mute control.
- ROTARY CONTROL** Rotate to adjust the sound output level.
- SRC** Press repeatedly to select the desired mode for operation. Note: GPS mode cannot be selected by this control key
- M/N** Press to shift between GPS navigation mode & current operation mode.
- IR** Remote control sensor for signal reception from remote handset.
- AUX** Insert an external device to this jack in order to have sound output of that external device through the unit.
- USB** Insert USB device to this slot for digital files playback.
- SD** Insert micro SD card to this port for digital files playback.
- GPS (Optional)** Insert micro SD card installed with navigation software to this port for operation under GPS mode.
- BT** During unit operation, press to shift to Bluetooth mode for operation.
- MIC** For voice reception under Bluetooth operation.
- BND** During unit operation, press to shift to radio mode for operation. At radio mode, press repeated to select radio band for broadcasting.
- Radio Mode**  
Press repeatedly to fine tune radio frequency upward or downward. Press & hold shortly to tune radio frequency to the upward or downward station for broadcasting.
- USB / SD Input Mode (Playback Mode)**  
Press repeatedly to shift track upward or downward for playback. Press & hold shortly to activate fast forward or fast rewind mode. At this mode, press repeatedly to select various speeds of fast forward or fast rewind. (Note: Not available for operate at photo playback mode)
- BT Mode**  
Press to shift track upward or downward for playback.
- OPEN** Press to flip up or store back the TFT screen from the compartment.
- ▲ / ▼** When the TFT screen has been flipped up, press repeatedly to adjust the angle for viewing. Press and hold ▼ shortly to store back the TFT screen to its compartment. When the TFT screen has been stored in its compartment, press ▲ to pop up the TFT screen.
- Press to detach the front panel from the main unit for security purpose. When the front panel has been detached, insert micro SD card to SD slot as well as micro SD card to GPS slot for media files playback & GPS navigation respectively.

### Note

Printings and symbols on the above may be varied from the exact main unit. Referred to the main unit for exact functions and features that applied. User is highly recommended to use the touch screen control to operate. Most of the operations of this unit cannot be controlled by the main unit.

## REMOTE HANDSET – GENERAL OPERATION

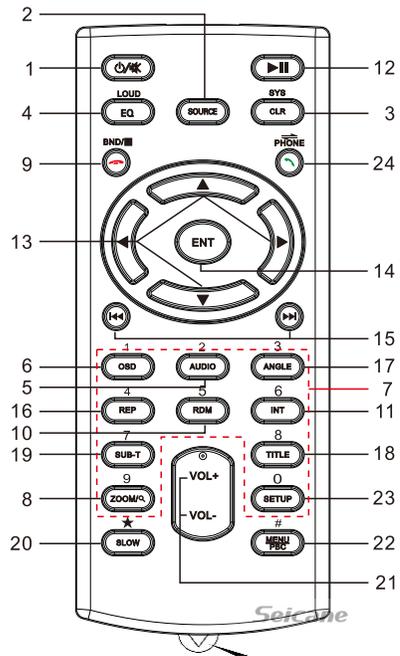

### BATTERY REPLACEMENT

Refer to the back of remote handset for details on how to replace the battery. Replace only with the same or equivalent type of battery.

### BATTERY DISPOSAL

Attention should be drawn to the environmental aspects of used battery disposal. Battery shall not be exposed to excessive heat such as sunshine, fire or the like. Danger of explosion if battery is incorrectly placed.

Remove this tab before using the remote handset

NO.	SYMBOL	OPERATION & CONTROL MODES
1.		When the unit is turn off, press to turn on the unit. When the unit is turn on, press & hold shortly to turn off the unit.
2.		During unit operation, press to turn on or off of sound mute control.
3.	SOURCE	Press repeatedly to select the desired mode for operation. Note: GPS mode cannot be selected by this control key
3.	SYS / CLR	<b>BT Mode</b> Press to erase the digit input by error.
4.	EQ LOUD	Press repeatedly to select the desired preset equalization mode. Press & hold shortly to turn on or off of loudness control.
5.	AUDIO	At video and music playback mode, each time press & hold shortly to select different audio output channels. (Note: Available on input device or media files recorded with different output channels and this selection is not available under Bluetooth mode)
6.	OSD	At media playback mode, press & hold shortly to display the contents of the playback details on screen. Note: Not available at music playback mode
7.	1 – 6	<b>Radio Mode</b> Press any one of the number key 1-6 to select a station that had been stored in the preset memory number key 1-6 for broadcasting. Press & hold shortly the number key 1-6 to store the current broadcasting frequency or station into the respective preset memory key number 1-6.

26. Touch to select upward or downward track for playback.
27. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
28. Touch to setting the volume.
29. Touch to shift screen to **MAIN MENU**.

Remarks: Depends on the system language set on the unit, list of phone book / incoming call / dial out call / missing call will not be display correctly.

## ON SCREEN – AUXILIARY INPUT OPERATION



At **MAIN MENU**, touch to shift to auxiliary input operation (provided an auxiliary video device had been connected). At auxiliary input operation, touch any portion of screen to activate **AV INPUT MENU** for operation.

### AV INPUT MENU




1. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
2. Touch to setting the volume.
3. Touch to shift to BT mode for operation ( available when a mobile one connected).
4. Touch to shift screen to **MAIN MENU**.

## ON SCREEN – MIRROR LINK WITH PHONE



### Mirror Link with android phone step:

1. Open the android phone “Settings”, find the Option of “Developer options”, enter this option, turn on the option “USB debugging”.
2. Connect your phone to the unit by USB cable, then will success connect to the phone. You can operate your phone on the unit screen.

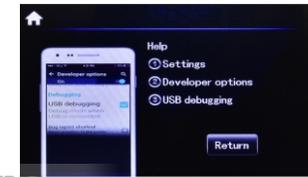

## ON SCREEN – GPS OPERATION (OPTIONAL)



At **MAIN MENU**, touch on screen to shift to GPS operation. At GPS navigation mode, the previous mode may still be playing and vice versa, you may need to stop playback first.

### IMPORTANT NOTICE

For GPS navigation, maximum 16 GB micro SD card installed with navigation software (map) must be inserted into the micro SD card port for GPS. GPS software path cannot be stored in sub-folder as sub-folder is not supported



1. Touch to shift to **BT DEVICE MENU** to show the current status on connection.
2. Touch to shift to **BT DIAL MENU** for dial out of phone.
3. Touch to shift to **BT RECORD MENU** to show the record on incoming calls / dial out numbers / missing calls of the connected mobile phone.
4. Touch to shift to **BT PHONE BOOK MENU** to show the phone book of the connected mobile phone.
5. Touch to shift to **BT MUSIC MENU** for transmission of music playback from the connected mobile phone.
6. Touch to select the linked up device.
7. Touch to delete the linked up device.
8. Touch to input the phone number.
9. Touch to erase the digit input by error.
10. Touch to dial out after input the phone number or redial when no phone number input.
11. Touch to hang up or refuse an incoming call.
12. Touch to shift conversation between mobile phone & BT of the unit.
13. Touch to turn on or off of sound muting of the microphone.
14. Touch to input digit (for conversation that needs data input).
15. Touch to hang up or refuse an incoming call.
16. Touch to pick up an incoming call.
17. Touch to download incoming calls / dial out numbers / missing calls of the connected mobile phone.
18. Touch to show list of missing calls.
19. Touch to show list of incoming calls.
20. Touch to show list of dial out numbers.
21. Touch to shift page up or down.
22. Touch to download the phone book of the mobile phone to the unit.
23. Touch to activate or close **BT PHONE BOOK SEARCH MENU** to search for the contact person or number.  
 Note 1: Available in English (for 1st letter only) and digit search only  
 Note 2: After input the English letter, list of contact with this English letter will appear, use page up / page down to search for the contact
24. Touch to input the digit or the letter for searching.
25. Touch to start / pause / resume music playback transmitted from the mobile phone.


- |         |   |
|---------|---|
| 0 - 9   | <u>USB / SD Input Mode</u><br>Press directly to input the number of track for playback.   |
| 8.      | <u>BT Mode</u><br>Press directly to input the phone number for dial out.  |
| Q       | <u>USB / SD Input Mode</u><br>At video & photo playback, each time press & hold shortly to select various zoom in and zoom out of screen for viewing.   |
| 9.      | <u>Radio Mode</u><br>Press to start scanning all the preset stations on memory and stop for a few seconds for broadcasting.<br>Press & hold shortly to start searching the frequency and storing the strongest signal stations into the preset memory stations. After storing the stations, the unit starts scanning all the preset stations on memory and stop for a few seconds for broadcasting. |
| ■       | <u>Radio Mode</u><br>Press repeatedly to select the desired radio band for broadcasting.  |
| ☎       | <u>USB / SD Input Mode</u><br>Press to stop playback temporary and will shift to playlist (for playback selection). Normal playback will resume after a while.  |
| 10.     | <u>BT Mode</u><br>Press to hang up or refuse an incoming call.  |
| 11.     | RDM<br>At USB / SD input playback mode, press & hold shortly to turn on or off of random playback of the input device   |
| 12.     | INT<br>At music playback mode, press & hold shortly to turn on or off of intro playback of the input device. (Note: Not available at Bluetooth mode)  |
| 13.     | ▶  <br>At USB / SD input & Bluetooth mode, press to pause, resume or start playback.  |
| ▲/▼/▶/◀ | <u>Folder / Playlist Mode</u><br>During folder/playlist display at media playback mode, press repeatedly to select track for playback. Once selected, press ENT to confirm.   |
| 14.     | <u>Photo Playback Mode</u><br>Press to rotate photo position or show up-down, left-right mirror image.  |
| 15.     | ENT<br><u>Folder/Playlist Mode</u><br>During folder/playlist display at media playback mode, press ▲/▼/▶/◀ to select the desired setting/setup and press ENT to confirm/enter.  |
| ▶▶/◀◀   | <u>Radio Mode</u><br>Press repeatedly to fine tune radio frequency upward or downward.<br>Press & hold shortly to tune radio frequency to the upward or downward station for broadcasting.  |
| 16.     | <u>USB / SD Input Mode (Playback Mode)</u><br>Press repeatedly to shift track upward or downward for playback.<br>Press & hold shortly to activate fast forward or fast rewind mode. At this mode, press repeatedly to select various speeds of fast forward or fast rewind. (Note: Not available for operate at photo playback mode)   |
| 17.     | <u>BT Mode</u><br>Press to shift track upward or downward for playback.   |
| REP     | At playback mode under USB / SD input, each time press & hold shortly to activate various repeat playback setting.  |
| ANGLE   | Not available for operation.  |

18. TITLE Radio Mode  
Press to select stereo (ST) or mono mode at FM radio band. (Note: At stereo mode and when stereo signal received, stereo indicator appeared on screen whereas this is no indication for mono mode and mono signal received).
19. SUB-T Video Playback Mode  
Each time press & hold shortly to select different sub-titles that recoded in the input device or media files. (Note: Depended on the input device & playback media, this function may not be available)  
Radio Mode  
At FM radio band, press to select local setting for reception of strong signal stations and distant setting for reception of weak signal stations. (Note: LOC appears on screen on local setting whereas no indication for distant setting)
20. SLOW Video Playback Mode  
At video playback mode, each time press & hold shortly to select different speeds on slow motion playback.
- ★ BT Mode  
Press for “★” symbol input.
21. VOL + / VOL - Press repeatedly or press & hold to adjust sound output level.
22. # / MENU / PBC BT Mode  
Press for “#” symbol input.
23. SETUP During unit operation, press & hold shortly to activate setup menu on screen for various system setup. Press & hold shortly again to return to previous operation mode. (Note: System setup cannot be operated by remote handset. System setup can only be operated by touch screen – refer to ON SCREEN OPERATION for details)
24. ☎ BT Mode  
Press to pick up an incoming call; dial out after input a phone number; redial last dial out number.  
⇌ / PHONE BT Conversation Mode  
Press to shift conversation between main unit and mobile phone.

Remarks: Depends on the input devices & playback media files, operation may be varied or not available for operation.

### ON SCREEN – MAIN MENU OPERATION

Touch top left corner of screen to enter to **MAIN MENU**.

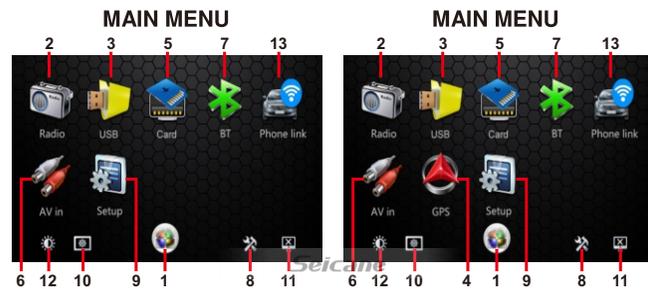

Touch the icon on the desired mode on screen and the unit will then enter into the mode that selected for operation.

Hold & slide the operation icon on screen to shift to other **MAIN MENU** that shows the hidden input or operation icons.

26. Touch to erase the digit input by error.
27. Touch to confirm after input the number of track for playback.
28. Touch to shift back to PLAYBACK MENU.

### ON SCREEN – BT OPERATION



At **MAIN MENU**, touch on screen to shift to BT operation.




During unit operation, touch on screen to shift to BT operation.

### LINK UP WITH MOBILE PHONE

To linkup BT connection with the mobile phone, take your phone and follow the steps:

- set the mobile phone to BT state
- start to search new device
- after searched, new device (CAR-KIT or similar) searched out, confirm the search
- in case of need, input default code “0000” or “8888” in the mobile phone
- at the same time, BT icon & **BT DEVICES MENU** appeared on screen
- connection succeeded and you can start using BT function

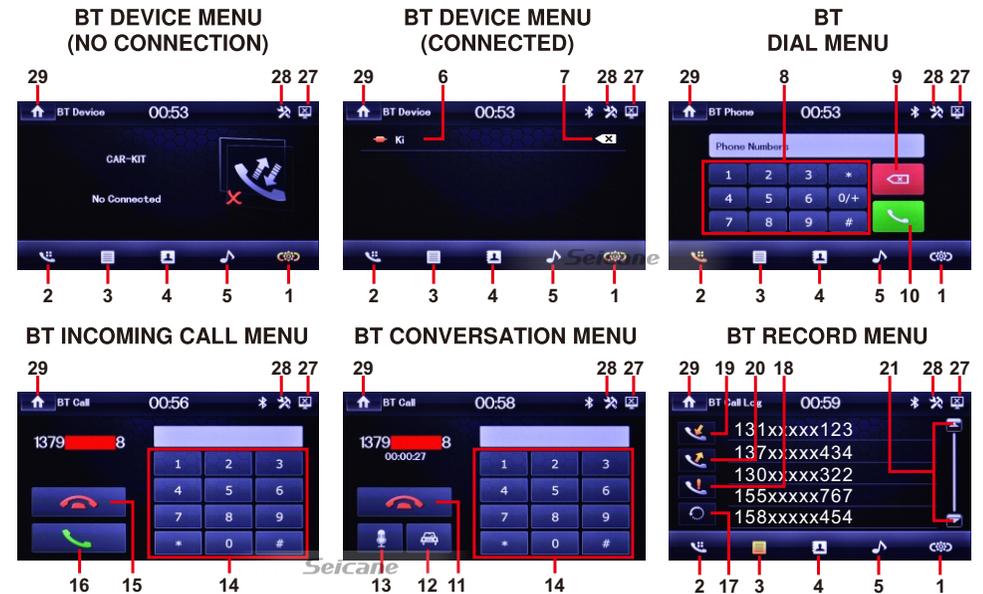



1. Hold & slide to show the hidden operation icons for operation.
2. Touch to shift screen to **MAIN MENU**.
3. This shows the current input device for playback (USB / SD CARD).
4. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
5. Touch to setting the volume.
6. Touch to shift to BT mode for operation (available when a mobile phone connected).
7. Touch to activate **PLAYLIST / FOLDER PLAYLIST** (available for input device recorded with folder) to select folder / track for playback.
8. Touch to shift to next or previous track for playback.  
At video playback mode, repeatedly touch & hold shortly to activate various fast forward or fast rewind mode.
9. Touch to start, pause or resume playback.
10. Touch to stop playback temporary and will shift to playlist for playback selection. Touch twice on the selected track for playback or normal playback will resume after a while.
11. Touch repeatedly to select repeat playback mode.
12. Touch to turn on or off of random playback of the input device.
13. Touch repeatedly to zoom in and zoom out of screen for viewing.
14. Touch repeatedly to select the audio output channels that recorded in the playback device.
15. Touch repeatedly to select different sub-titles that recorded in the playback device.  
(Note: Depended on the input device & playback media, this function may not be available)
16. Touch repeatedly to select different speeds of slow motion playback.
17. Touch to activate **KEYBOARD MENU** to input track number directly for payback.
18. At video playback mode, hold & slide to select the position (time) for playback.
19. At music playback mode, hold & slide to select the position (time) for playback.
20. Touch to select music playback at **FOLDER PLAYLIST / PLAYLIST** provided the playback device recorded with music files.
21. Touch to select photo playback at **FOLDER PLAYLIST / PLAYLIST** provided the playback device recorded with photo files.
22. Touch to select video playback at **FOLDER PLAYLIST / PLAYLIST** provided the playback device recorded with video files.
23. Touch to shift to **FOLDER PLAYLIST** or **PLAYLIST** to select desired folder or file for playback. To start playback, touch twice on the selected track.
24. Touch to shift to previous **FOLDER PLAYLIST / PLAYLIST** or beginning of the folder list / playlist.
25. Touch to shift page up or down.

1. Touch to shift to **MAIN MENU**.
2. Touch to start radio operation.
3. Touch to start USB input operation (when an USB device inserted).
4. Touch to start GPS navigation operation (when micro SD card with GPS software inserted).
5. Touch to start SD card input operation (when a micro SD card inserted).
6. Touch to start auxiliary input operation (when an auxiliary device inserted).
7. Touch to start BT operation (when connected to a mobile phone).
8. Touch to show volume adjustment.
9. Touch to start various setup of the unit.
10. Touch repeatedly for desired wallpaper (background colour) setting.
11. Touch to turn off the screen display.
12. Touch repeatedly to select brightness of screen or turn off the screen. Turn off of screen is available under headlamp detection at OFF mode. When the screen is off, touch any portion of the screen to turn it on again. Following preset brightness modes can be selected.



At this mode, brightness of screen is set by the user (user setting – refer to SYSTEM SETUP & ILLUMINATION BACKLIGHT SETUP under ON SCREEN – SETUP OPERATION for detail).

After touch this icon  is turn off the screen display, then touch any portion of the screen to turn it on again..

13. Touch to start mirror link with phone operation.

### ON SCREEN – AUDIO & VISUAL SETTING

 During unit operation and when this icon appeared on screen, touch to activate audio & visual setting for various audio & visual setup.



#### Volume Control

1. Touch to shift to Volume Control Menu.
2. Touch to preset Equalization Control.
3. Touch to preset Field Control.
4. Touch to turn on or off of loudness.



#### Preset Equalization Control

1. Touch to select the desired preset equalization mode. At Custom mode, it is set by the user (Refer to AUDIO SETUP under ON-SCREEN – SETUP OPERATON).
2. Hold & Slide to adjust output level on Bass, only for Custom mode.
3. Hold & Slide to adjust output level on Trebel, only for Custom mode.



#### Field Control

1. Hold & slide to set for the output level on left / right / front / rear speaker.

### ON SCREEN – SETUP OPERATIOPN




At **MAIN MENU**, touch to shift screen to **SETUP MENU** for various setup selection of the unit.

### UNIT SETUP

#### SETUP MENU




#### SETUP MENU

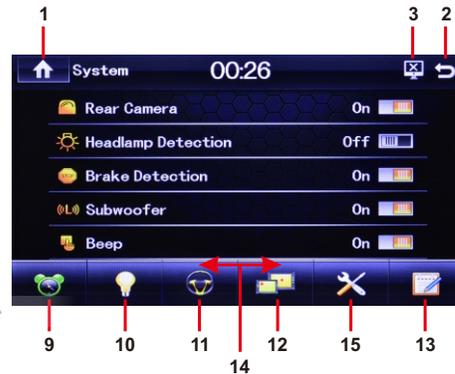

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to turn off the screen.
4. Touch to shift to **SYSTEM SETUP MENU** for various system setting (Refer to SYSTEM SETUP).
5. Touch to shift to **AUDIO SETUP MENU** for various audio setting (Refer to AUDIO SETUP).
6. Touch to shift to **VISUAL SETUP MENU** for various visual setting (Refer to VISUAL SETUP).
7. Touch to shift to **MEDIA SETUP MENU** for various media setting (Refer to MEDIA SETUP).
8. Touch to shift to **BT SETUP MENU** for various BT setting (Refer to BT SETUP).
9. Touch to shift to **CALENDAR SETUP MENU** for calendar & clock setting (Refer to CALENDAR & CLOCK SETUP).
10. Touch to shift to **LIGHT SETUP MENU** for various illumination backlight setting (Refer to ILLUMINATION BACKLIGHT SETUP).

### ON SCREEN – USB / SD CARD INPUT OPERATION

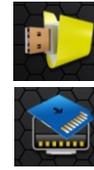


At **MAIN MENU**, touch to shift to multi-media playback mode and playback will start automatically. Depends on the input device and playback media, touch on screen (at music playback, touch repeatedly on screen) to show various playback menus for operation.


#### VIDEO PLAYBACK MENU



#### VIDEO PLAYBACK MENU

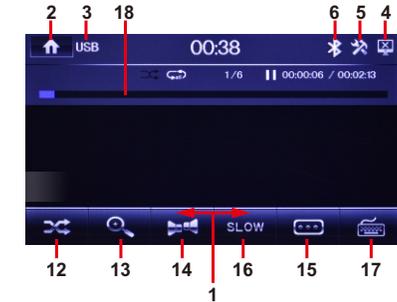

#### KEYBOARD MENU

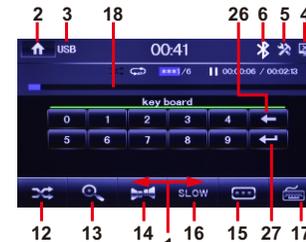

#### MUSIC PLAYBACK MENU



#### MUSIC PLAYBACK MENU




#### MUSIC PLAYBACK MENU




#### FOLDER PLAYLIST

#### PHOTO PLAYBACK MENU

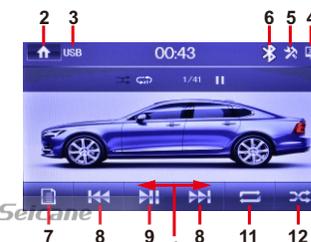

#### PLAYLIST

#### PHOTO PLAYBACK MENU

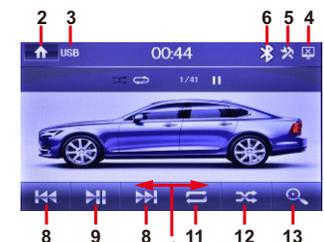


## ON SCREEN – RADIO OPERATION



At **MAIN MENU**, touch to shift screen to **RADIO MENU** for radio operation.

### RADIO MENU

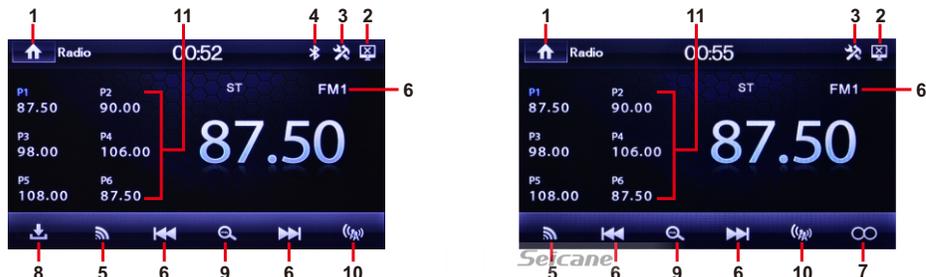

1. Touch to shift screen to **MAIN MENU**.
2. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
3. Touch to setting the volume.
4. Touch to shift to BT mode for operation (available when a mobile phone connected).
5. Touch repeatedly to select desired radio band for broadcasting.
6. Touch to tune the radio frequency to upward or downward station for broadcasting. Repeatedly touch & hold shortly to fine tune the radio frequency upward or downward.
7. Touch to select stereo (ST) or mono mode at FM radio band. When stereo signal received, stereo indicator will be appeared on screen and this is no indicator for mono signal.
8. Touch to start searching the radio frequency & storing the strongest signal stations into memory stations (P1 – P6). After one cycle searched, the unit starts intro broadcasting of the preset memory stations for a few seconds.
9. Touch to start intro broadcasting of the preset memory stations for a few seconds. Touch again to stop this intro broadcasting.
10. Touch to select local (LOC) setting for reception of strong signal stations and a distant setting for reception of weak stations. When local (LOC) setting is selected, LOC will appear on screen and this is no indication for distant setting.
11. Touch the desired preset station number (P1 – P6) to start broadcasting of the selected station. Touch & hold shortly the preset station number can store the current broadcasting station (frequency) into that station number.


11. Touch to shift to **SWC SETUP MENU** for steering wheel control setting (Refer to STEERING WHEEL CONTROL SETUP).
12. Touch to shift to **CALIBRATION MENU** for touch screen calibration setting (Refer to TOUCH SCREEN CALIBRATION SETUP).
13. Touch to shift to **VERSION MENU** to show details of the unit (Refer to VERSION OF UNIT).
14. Hold & Slide to left or right show the hidden setting modes.
15. Touch to modify Factory Settings .

## SYSTEM SETUP

### SYSTEM SETUP MENU



### SYSTEM SETUP MENU

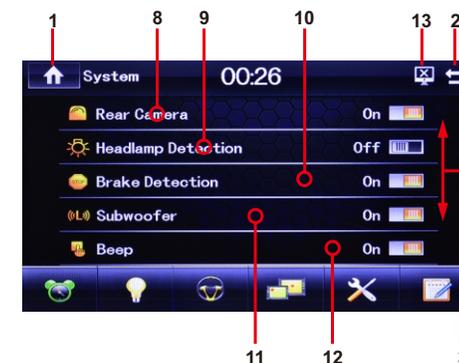

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Hold & slide to show the hidden setting modes.
4. Touch to activate AREA INTERFACE to select the country or area located (for the radio frequency that suits the country or area that located).
5. Touch to activate LANGUAGE INTERFACE to select the desired system language on screen.
6. Touch to activate PASSWORD INTERFACE to input password for opening scene logo setting.  
Remarks: This setting is for ex-factory setting and not available for user setup
7. Touch to turn on or off of front camera input (when front camera connected):
  - ~ when the front camera input is turn on and the car is shifted from backward mode to forward mode, front camera input will be display for 10 seconds
  - ~ the default setting after first installation is off and at this moment, no front camera input will be display when the car is shifted from backward mode to forward mode
8. Touch to turn on or off of rear camera input (when rear camera and the pink wire connected).
9. Touch to turn on or off of headlamp detection of the car (when the orange wire connected with the on/off of car headlamp).
  - ON mode: when the headlamp of the car turned on, brightness of screen will shift to the default setting by user. User can also adjust the brightness of screen at this mode (refer to ILLUMINATION BACKLIGHT SETUP for details)
  - OFF mode: when the headlamp of the car turned on, brightness of screen will not be affected


10. Touch to turn on or off of allowing watching video during driving (when the brake – brown wire has not been connected).
11. Touch to turn on or off of sub-woofer output.
12. Touch to turn on or off of beep sound when touching on screen for control.
13. Touch to turn off the screen.

### AUDIO SETUP



1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **EQ MENU** for equalization setting.
4. Touch to activate **FIELD MENU** for sound output setting on balance & fader.
5. Touch to turn on or off of loudness control.
6. Hold & slide to set for output level on bass.
7. Hold & slide to set for output level on treble.
8. Touch repeatedly to select the desired preset equalization mode.
9. Hold & slide to adjust the output level between left & right speaker.
10. Hold & slide to adjust the output level between front & rear speaker.
11. Hold & slide to set for the desired output level between left & right speaker as well as front & rear speaker.
12. Touch to turn off the screen.

### VISUAL SETUP

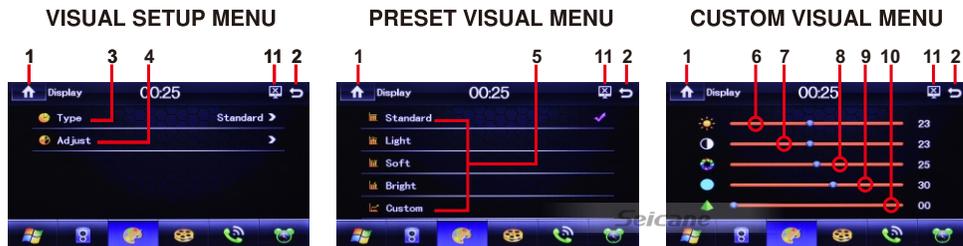

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.


3. Touch to turn on or off of steering wheel control (when the steering wheel control wires – grey & green as well as the ground wire connected).
4. Touch to activate **SW STUDY MENU** for steering wheel control learning & setting.  
Steps for learning & setting:  
~ touch any control key “5” on screen  
~ press & hold the respective control of the steering wheel of the car  
~ the unit starts learning and once completed, indicator appears on screen  
~ follow the above steps to set for all other controls  
~ when completed, press “7” to confirm the setting  
~ press “6” to cancel the setting
5. These show items available for setting.
6. Touch to cancel the setting.
7. When study & setting completed, touch to confirm the setting.

### TOUCH SCREEN CALIBRATION SETUP



1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to shift screen to **CALIBRATION INTERFACE**. Follow the 「+」 mark appeared, touch & hold shortly to complete the calibration.

### VERSION OF UNIT

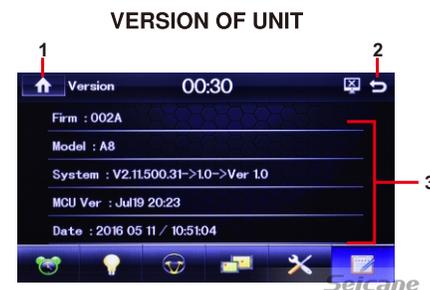

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. These show the software version of unit.

Note: The **VERSION OF UNIT** is used to show the details of unit. This is not available for setting.

### MODE MENU

### ADJUST MENU

### R.G.B. MENU



1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **ADJUST MENU** to adjust backlight illumination.
4. Touch to activate **MODE MENU** to select illumination mode (auto / manual / primary).
5. Touch to select MANUAL MODE for R.G.B. colour setting.
6. When AUTO MODE selected, touch to activate AUTO CYCLE TIME INTERFACE to select the time for automatic backlight change.
7. Touch to select AUTO MODE for automatic backlight change (cycle change).
8. When MANUAL MODE selected, touch to activate **R.G.B. MENU** for R/G/B adjustment.
9. Touch to select PRIMARY MODE to select a single colour illumination.
10. When PRIMARY MODE selected, touch to activate COLOUR INTERFACE to select a single colour for illumination.
11. Hold & slide to set brightness of screen when brightness of screen is set at USER MODE (refer to ON SCREEN – MAIN MENU OPERATION):
12. Hold & slide to set brightness of screen when brightness of screen is set at USER SETTING MODE under headlamp detection at ON mode (refer to ON SCREEN – MAIN MENU OPERATION):
13. At **R.G.B. MENU**, hold & slide to adjust the desired R / G / B colour.

Note: Backlight illumination is synced with the on/off of the car lamp. Orange wire should be connected to the on/off of car lamp

### STEERING WHEEL CONTROL SETUP

#### SW CONTROL MENU

#### SW STUDY MENU



1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.

3. Touch to activate **PRESET VISUAL MENU** for preset visual setting.
4. Touch to activate **CUSTOM VISUAL MENU** for visual setting.
5. Touch to select the desired preset visual mode of screen.  
(Note: At "Custom" mode, visual setting on brightness, contrast, hue, saturation & sharpness are made by user under **CUSTOM VISUAL MENU**)
6. Hold & slide to adjust brightness of screen.
7. Hold & slide to adjust contrast of screen.
8. Hold & slide to adjust hue of screen.
9. Hold & slide to adjust saturation of screen.
10. Hold & slide to adjust sharpness of screen.
11. Touch to turn off the screen.

### MEDIA SETUP

#### MEDIA SETUP MENU

#### ASPECT RATIO MENU



1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **ASPECT RATIO MENU** to select aspect ratio of screen for viewing.
4. Touch to select the desired aspect ratio of screen for viewing.

### BT SETUP

#### BT SETUP MENU

#### BT SETUP MENU



1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **BT SETUP MENU** to select BT setup options.
4. Touch to select the desired BT setup options.
5. Touch to select the desired BT setup options.
6. Touch to select the desired BT setup options.
7. Touch to select the desired BT setup options.
8. Touch to select the desired BT setup options.
9. Touch to select the desired BT setup options.
10. Touch to select the desired BT setup options.
11. Touch to select the desired BT setup options.

### KEYBOARD MENU




### PIN CODE MENU



1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Hold & slide to show the hidden BT setup modes.
4. Touch to turn on or off of BT operation mode.
5. Touch to activate **KEYBOARD MENU** for renaming the device (default name "CAR-KIT").
6. Touch to activate **PIN CODE MENU** for changing the pin code of the device. (Note: Default pin code "0000" or "8888").
7. Touch to turn on or off of auto linking between the car unit and mobile phone when the car unit turned on again after power off.
8. Touch to turn on or off of auto answer when receiving incoming call.
9. Touch to turn on or off of automatic loading record of incoming calls / dial out numbers / missing calls of the mobile phone to the car unit. (Note: Loading of record will start automatically when the unit linked up with the mobile phone & shift to **BT RECORD MENU** at the first time – refer to ON SCREEN – BLUETOOTH OPERATION for details)
10. Touch to turn on or off of automatic loading phone book of the mobile phone to the car unit. (Note: Loading of phone book will start automatically when the unit linked up with the mobile phone & shift to **BT PHONE BOOK MENU** at the first time – refer to ON SCREEN – BT OPERATION for details)
11. Touch to turn on or off of the default volume level during BT conversation.  
ON mode: volume level at BT conversation is shifted to the default volume level  
OFF mode: volume level at BT conversation is the same level at current volume level  
Note: Volume level can be adjusted at any time during BT conversation
12. Touch to input the new name of the device.
13. Touch to shift between capital letter & small letter.
14. Touch to erase the digit / letter input by error.
15. Touch for spacing.
16. Touch to confirm the input.
17. Touch to input the new pin code of the device.
18. Touch to erase the digit input by error.
19. Touch to confirm the input.

### CALENDAR & CLOCK SETUP

#### CALENDAR SETUP MENU

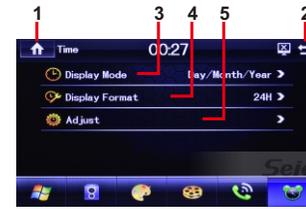

#### CALENDAR FORMAT MENU



#### CLOCK FORMAT MENU



#### SETTING MENU



1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **CALENDAR FORMAT MENU** for date / month / year format setting.
4. Touch to activate **CLOCK FORMAT MENU** for 12H / 24H display format setting.
5. Touch to activate **SETTING MENU** for calendar & clock setting.
6. Touch to select calendar display format.
7. Touch to select clock display format.
8. Touch repeatedly to set for calendar & clock.

### ILLUMINATION BACKLIGHT SETUP

#### LIGHT (AUTO) SETUP MENU



#### LIGHT (MANUAL) SETUP MENU



#### LIGHT (PRIMARY) SETUP MENU

