Seicane® Quick Start Guide

Install 01 Enjoy 02

Wiring Diagram

| | NO Connect | | Radio Antenna NO Connect |
|--------------------------------|--------------|------------------|-----------------------------|
| POWER SUP | PLY PORT | RCA/AUX/ | |
| (15) (13) (11) (9) | 7 5 3 1 | | 5 4 3 2 1 |
| 16 14 12 10 FUSE | | 20 19 18 17 1 | 3 15 14 13 12 11 |
| 1: GND | 9: Front R- | 1: MIC- | 11: GND |
| 2: B+ | 10: Rear L- | 2: DVR-CVBS | 12: RCA FL OUT |
| 3: ACC | 11: Front R+ | 3: NC | 13: RCA FR OUT |
| 4: ILL Detection 12: Rear L+ | | 4: NC | 14: GND |
| 5: Reverse Detect 13: Front L- | | 5: NC | 15: GND |
| 6: KEY2 14: Rear R+ | | 6: NC | 16: GND |
| 7: KEY1 15: Front L+ | | 7: NC | 17: CVBS-OUT |
| 8: ANT. Power 16: Rear R- | | 8: AUX-L 18: SUB | |
| | | 9: AUX-R | 19: AUX-CVBS |
| | | 10: AMP±12V | 20: MIC+ |

Note: If you have any questions about installation, please send us photos about your original car's plugs at aftersales@seicane.com, we can make a wiring diagram for your car.

Safety Notes

• Speaker Connection Notes

- ① Please do not connect the speaker to the metal or chassis of the car.
- ② Please do not connect the speaker wires to each other.

• Power Cable Notes

If you would like to have another devices connected to this unit, you should confirm that the car circuit capacity is bigger than the overall fuse capacity of all connected devices.

• Rear-view/ Reversing Camera Connection Notes

① First of all, please consult the local driving rules and regulations, and to understand whether the law requires installing of rear-view reversing camera or not. You'd better arrange a professional technician to help you install the rear-view reversing camera or make the connections.

② After the connection of the rear-view reversing camera, you are enabled to see the car rear situation through the screen. This function will help you reverse safely, especially when you are driving a big car.

Installation of the Car Radio

The instruction will not be applied for all kinds of cars. Therefore, if your car has different needs, please make the appropriate adjustments. If you have any questions about mounting kit, please feel free to contact us at sales@seicane.com.

Pre-Installation Notes

① This product is used for the vehicle with 12V battery and negative end. Before the installation, please check the battery voltage.

② Before connecting, please ensure that the ignition is off so as to avoid short circuit.

- ③ Connect the yellow and red power cable at last.
- ④ Confirm that all loose wires are isolated with electrical tape.
- (5) Do not tangle the wire when you tighten the moving parts (such as seat rails).
- (6) Confirm that all GND is connected to the same place.

⑦ Using the improper fuse may cause damage of fire, thus, when you replace the fuse, please don't hesitate to consult a professional technician.

Installation Instruction

1 If the car is not equipped with car devices or navigation unit, please disconnect the car negative battery terminal. However, when the car is equipped with car

devices or navigation unit, it will lose the data if disconnect the car battery. If the car battery is still connected, in order to avoid short-circuit, you should confirm that the bare wires do not touch each other.


② Removal control area of the decorative panel.

③ Check the cable connection again according to the rear seat wiring diagram.

④ Carefully view ICA when opening tilt angle to check the car, make the host enter the Central District according to the tilt angle. It is finished until you hear a "click" sound.

(5) Install the decorative panel again (Without a decorative panel, you have no need to perform this step.)

(6) Reconnect the car negative battery terminal. As shown below.

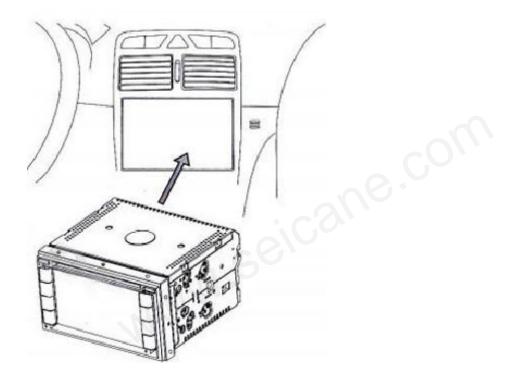

Key Instruction

| No. | Кеу | Function Instruction |
|-----|-----|----------------------|
|-----|-----|----------------------|

| 0 | | |
|----|-----|----|
| Se | ica | ne |
| | CU | |

| 1 🖒 | When powered off, short press this button to make the |
|--------|---|
| | unit power on. The unit will be powered off by long |
| | pressing this button. |
| | In the turn off state, press to turn on; in the turn on |
| 2 | state, short press for main interface, long press to turn |
| | off the unit. |
| | Press this button to return to the previous menu. |
| 3 🗲 | |
| | When powered on, short press this button, then the |
| 4 🛋+ | voice will increase accordingly; long press this button, |
| | the voice will continue to increase. |
| | When powered on, short press this button, voice will |
| 5 🛋 🛋 | reduce accordingly; long press this button, the voice |
| | will continue to reduce. |
| | Bluetooth hands-free function for voice |
| 6 Оміс | communication received window. |
| | Reset the factory setting. |
| 7 ORST | |
| 8 5 | Press this icon to have screenshot. |
| | |
| 9 | This icons means brightness. |
| | |
| 10 🗇 | Click this icon to see the recent Apps you have used. |
| | |
| 11 | Short press this button to switch between mute and |
| | non-mute. |
| 12 | This icon means WiFi connection. |
| | This icon means Bluetooth connection. |
| 13 | |
| 14 🗸 | This icon means volume. |

Fast Guide

• Turn ON/OFF Operation

1 Turn ON: If you shut down the host by turning off the ACC at last time, just turn

on the ACC, and then the host will automatically turn on. On the contrary, if not, please press any key on the panel to turn on the host.

② Turn OFF: If you turn on the ACC, the system will automatically turn off when it recognizes power off. Long press "SRC" key or vertically press the knob can turn on the host.

• Insert/Eject the Disk (for car radios with built-in DVD player function)

(1) Insert the disk: Under the condition that the unit is turning on, insert the disk. When the system detects the disk successfully, the host will automatically play the disk.

② Eject the disk: Short press the panel key to eject the disk. After around 15 seconds, if you still don't take out the disk, the system will automatically insert the disk and play again.

• Audio/ Video Player

Audio/ Video Playback: Firstly, please insert the USB or SD equipment into the USB

port or SD card slot, then click the icon 2/ 2 on the media interface to operate.

 
• GPS Function

Built-in navigation offers detailed, reliable route guidance information to help you get where you want to go.

You can actually download a range of GPS Navigation apps via Google Play and run

them on the unit. Just click the icon 😡 on the main menu to operate.

Radio Function



🥑 on the main menu to enter the Radio interface.


• Bluetooth Function

On the main interface, please click the icon to enter Bluetooth interface. ① Search the Bluetooth device.

Tap a device of the paired devices or on the available devices list, then tap to pair

the device. Tap **used** to unpair the device.



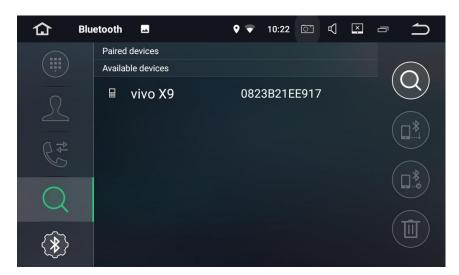


② Enter the default password "0000".

a. You can change the Device Name of this unit. Tap **KSP** to enter a different name.

b. You can change the PIN Number(Bluetooth pairing password). The default password is **0000**. Enter another four digit number, then tap Done to set a new password.

c. You can turn AutoAnswer/Autoconnect on or off.

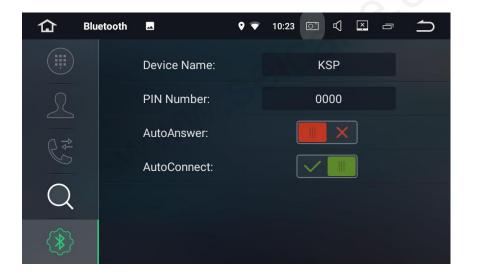

3 Input the phone numbers by on-screen buttons, press the icon $\fbox{5}$ to dial,

press the icon ion to hang up. You can also choose a contact from the phone book to make a call.



| <u>ሴ</u> | Bluetooth 🗳 🛓 🜵 | ♥ ∦ 🛡 | 20:08 🔄 📢 | | |
|----------|-------------------------|--------------|-----------|------------|---|
| | | | | | |
| 2 |] | 2 ABC | 3 def | × | |
| 64 14 | 4 _{ані} | 5 JKL | 6 MNO | C. | |
| Q A | 7 PORS | 8 TUV | 9 wxyz | • | |
| (*) | * | 0+ | # | (t) | |
| <u>ጉ</u> | Bluetooth 🖪 🛓 ψ | ◊ * マ | 20:08 🔄 🗹 | | |
| | Search | | | | |
| Ω | R | 159 | ∎ 0008 | \bigcirc | 2 |
| | s seicane | 158 🗖 | 4271 | | |
| 24 | | | | | |
| Q ₩ | | | | | |
| * | | | | G | |
| | NN. | | | | • |

Seicane

| Address: Room 202, 2nd Floor, Building 22, Ma'anshan Second Industrial Zone, | | |
|--|--|--|
| | Baoan District, Shenzhen City, Guangdong Province, China | |
| Tel: | +86 (0)755-8658 6800 Fax: +86 (0)755-8658 6630 | |
| E-mail: | sales@seicane.com | |
| Website: | http://www.seicane.com/ https://www.facebook.com/seicane/ | |
| | http://www.twitter.com/seicane https://www.youtube.com/user/seicane/ | |





facebook



VK