

Seicane T6096 1999-2007Jeep Grand Cherokee Liberty aftermarket car stereo upgrade installation replacement instruction

Seicane T6096 1999-2007 Jeep Grand Cherokee Liberty car radio after installation



Please note:

This unit can be suitable for the following cars which are also with the same installation steps as follows.

1999-2004 Jeep Grand Cherokee
2003-2006 Jeep Wrangler
2002-2007 Jeep Liberty
2002 2003 2004 Dodge Dakota
2004 2005 Dodge Neon
2004 2005 2006 Dodge Stratus
2002 2003 2004 Dodge Intrepid
2004 2005 2006 2007 Dodge Caravan
2005 2006 Dodge Viper
2002 2003 Dodge Durango
2002 2003 2004 Chrysler 300M
2003 2004 2005 Chrysler PT Cruiser
2002 2003 2004 2005 2006 Chrysler Sebring
2002 2003 2004 Chrysler Concorde
2004 2005 2006 2007 Chrysler Town & Country

2001 2002 2003 Chrysler Grand Voyager
2002 2003 2004 2005 2006 Dodge RAM
2004 2005 Dodge 1500 Pickup Truck
2004 2005 Dodge 2500 Pickup Truck
2004 2005 Dodge 3500 Pickup Truck

Please notice before the installation:

1. Please apply the parking brake and remove the negative cable on the vehicle battery before the removal to ensure safety.
2. A lever and a screwdriver need to be prepared before the installation.
3. For your convenience, here's the recommended tools for removal and installation from Seicane, please check for more details:


<http://www.seicane.com/car-dvd-dismantling-device-srd-400>

1999-2007 Jeep Grand Cherokee Liberty car radio installation steps

1. Remove the trim piece above cup holder with a lever.




2. Remove 2 screws behind the trim piece.

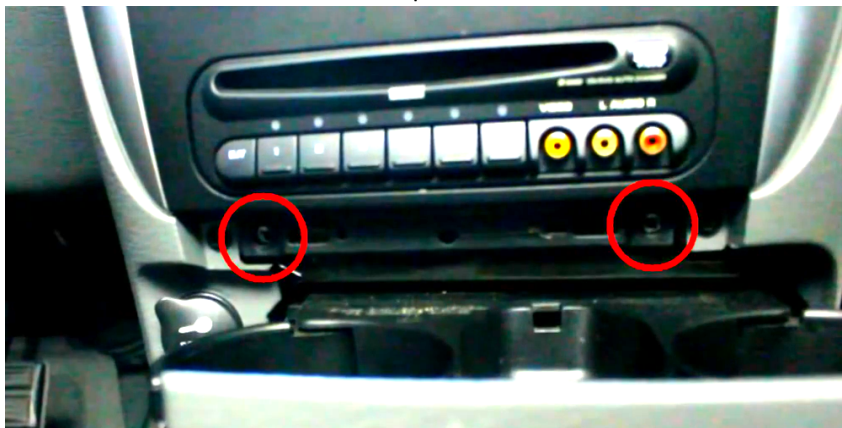

3. Gently pry around the side of trim panel with the lever and then remove the trim panel.



4. Remove 4 screws which hold the factory radio in place.

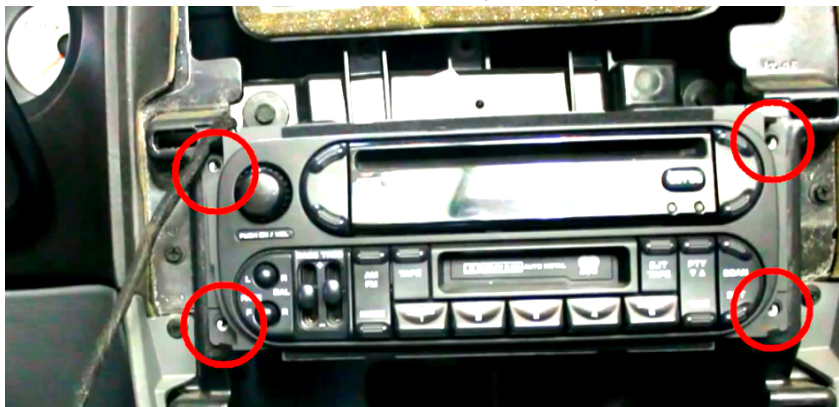

5. Take out the original radio.



6. Disconnect the smaller harness on the behind of the original car radio.



7. Check all the accessories for the new Seicane car radio.



8. Connect the harnesses to the back of the new Seicane car radio.



9. Connect the Seicane car radio to your original car radio 's plugs.
- 10.Install four screws and trim panel.
- 11.Install 2 screws behind the trim piece and the trim piece.
- 12.Turn on the new radio and have a comprehensive test if everything works well. If it doesn't, please check whether all the cables are connected correctly.

Please note:

We suggest you arrange a professional to install it. If you have any questions about installation, please send us photos about your original car's plugs, we can make a wiring diagram for your car.