

Seicane S168055 2012 2013 2014 KIA aftermarket car stereo upgrade installation replacement instruction

Seicane S168055 2012 2013 2014 KIA car radio after installation



Please notice before the installation:

1. Please apply the parking brake and remove the negative cable on the vehicle battery before the removal to ensure safety.
2. A lever and a screwdriver need to be prepared before the installation.
3. For your convenience, here's the recommended tools for removal and installation from Seicane, please check for more details:

<http://www.seicane.com/car-dvd-dismantling-device-srd-400>

2012 2013 2014 KIA car radio installation guide

1.Remove the original panel with a plastic knife, pry gently along the gap and pick up the panel, then remove it and then set it aside.



2.Remove screws that fixed the radio on the dashboard.




3.Pull the factory radio out of the dash. Pull it with medium force, as the wires are connected to the radio.



4. Unplug the connectors at the back of the factory radio.



5. Make antennas and cables connected step by step, and you should be very careful when you are doing this for it will affect whole procedure.

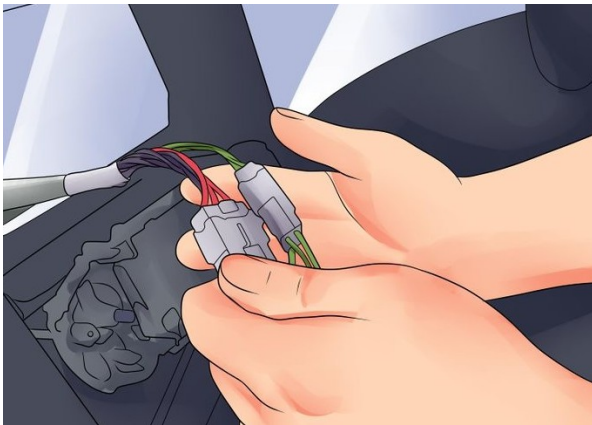

6. Put the new Seicane radio into your car, you should check whether your connections are correct, and you'd better have a tidy for the cables.

7. If everything is OK, firm screws into their original place.



8. Firm the panel on the new Seicane radio. Finally the new Seicane radio is installed and a comprehensive test should be conducted on the new radio.



Please note:

We suggest you arrange a professional to install it. If you have any questions about installation, please send us photos about your original car's plugs, we can make a wiring diagram for your car.