

Seicane S09201 1999-2007 Jeep Grand Cherokee Liberty aftermarket car radio upgrade installation replacement instruction

Seicane S09201 1999-2007 Jeep Grand Cherokee Liberty car radio after installation



Please note:

This unit can be suitable for the following cars which are also with the same installation steps as follows.

- 1999-2004 Jeep Grand Cherokee
- 2003-2006 Jeep Wrangler
- 2002-2007 Jeep Liberty
- 2001-2005 Chrysler Grand Voyager
- 2002-2004 Chrysler 300M
- 2002-2006 Chrysler PT Cruiser
- 2002-2006 Chrysler Sebring
- 2002-2004 Chrysler Concorde
- 2004-2007 Chrysler Town & Country
- 2002-2004 Dodge Dakota
- 2004-2005 Dodge 1500 Pickup
- 2004-2005 Dodge 2500 Pickup

2004-2005 Dodge 3500 Pickup
2004-2005 Dodge Neon
2004-2006 Dodge Stratus
2002-2004 Dodge Intrepid
2004-2007 Dodge Caravan
2005-2006 Dodge Viper
2002-2006 Dodge RAM
2002-2006 Dodge Stratus Sedan
2002-2007 CHRYSLER Caravan
2002-2004 CHRYSLER Dakota
2002 2003 CHRYSLER Durango
2002-2004 CHRYSLER Interpid
2002-2006 Dodge Ram pick-up
2002-2006 CHRYSLER Sebring convertible
2002-2006 CHRYSLER Sebring Sedan
2002-2006 CHRYSLER Stratus Sedan

Precautions for this installation:


1. Before you start up any work, park your car well and unplug the negative power cable to avoid any danger.
2. Please make sure that all fastened wires are isolated with electrical tape.
3. Please make sure the ignition is off to avoid short circuit.
4. Please prepare a lever and a screwdriver before the removal and the installation.
5. For your convenience, here's the recommended tools for removal and installation from Seicane, please check for more details: <http://www.seicane.com/car-dvd-dismantling-device-srd-400>

1999-2007 Jeep Grand Cherokee Liberty car radio installation steps

1. Remove the trim piece above cup holder with a lever.




2.Remove 2 screws behind the trim piece.

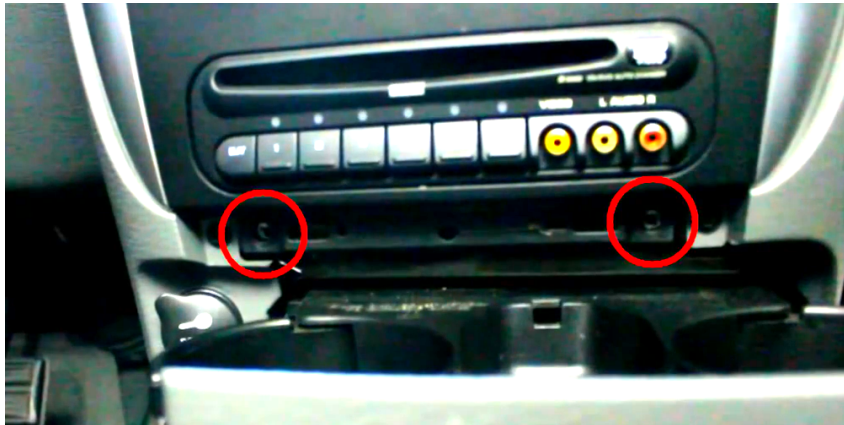

3.Gently pry around the side of trim panel with the lever and then remove the trim panel.



4.Remove 4 screws which holds the factory radio in place.

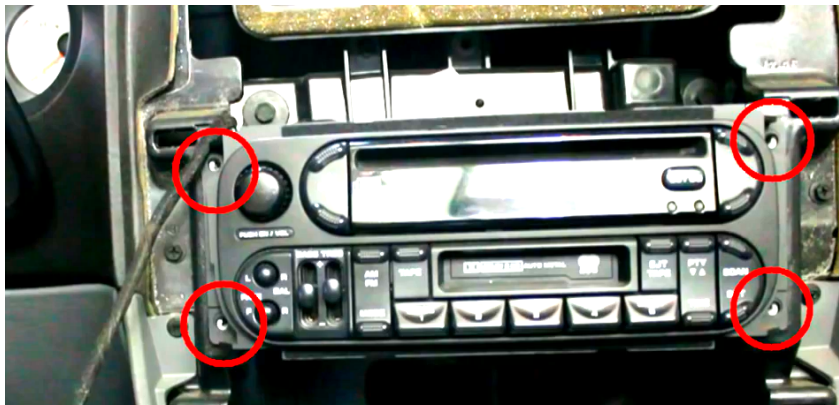

5. Take out the factory radio.



6. Disconnect the smaller harness on the behind of the factory radio.



7. Check all the accessories for the new Seicane car radio.



8. Connect the harnesses to the back of the new Seicane car radio.



9. Connect the Seicane car radio to your original car radio 's plugs.

10. Install four screws and trim panel.

11. Install 2 screws behind the trim piece and the trim piece.

12. Turn on the new radio and have a comprehensive test if everything works well. If it doesn't, please check whether all the cables are connected correctly.

Please note:

We suggest you arrange a professional to install it. If you have any questions about installation, please send us photos about your original car's plugs, we can make a wiring diagram for your car.